

N-COM MOBILE WIRE COMPATIBILITY TABLE

CODE	BRAND	MOBILE MODELS	basic hitz		basic hitz + intercom hit	
			Compatibilità (*) Compatibility (*)	Compatibilità (*) Compatibility (*)	Risposta dal casco Answer from the helmet	Note Notes
(A) CNC000A000001	NOKIA	NOKIA 1100-1101-1110-1600-2100-2300-2310-2600-2610-2626-2650-3210-3310-3330-3350-3410-3510-3510i-3650-3660-5210-5510-6030-6060-6510-6600-7280-7380-7650-8210-8250-8310-8800-8850-8890-8910-8910i-N-GAGE-N-GAGE QD	OK	NO	-	-
(B) CNC000A000002	NOKIA	NOKIA 5110-6110-6150-6210-6250-6310-6310i-7110-RINGO	OK	NO	-	-
(C) CNC000A000003	NOKIA	NOKIA 3100-3120-3200-3220-3230-3250-3300-5100-5140-5140i-5500-6020-6021-6070-6085-6100-6101-6102-6103-6111-6125-6131-6151-6170-6220-6230-6233-6234-6260-6280-6288-6610-6610i-6630-6650-6670-6680-6681-6800-6820-6822-7200-7210-7250-7250i-7260-7270-7360-7370-7600-7610-7710-9300-9300i-9500-E50-E60-E61-E61i-E65-N70-N73-N80-N90	OK	OK	OK	1
(F) CNC0000000001	NOKIA	NOKIA 8810	OK	OK	OK	2
(N) CNC000A000004	NOKIA	NOKIA 5130-5220-5230-5310-5530-5800-6710 nav-E52-E63-E75-N76-N78-N79-N81-N82-N85-N86-N900-N95-N95CB-N96-N97-N97 MINI-X3	OK	OK	NO	
(D) CNC000B000001	SIEMENS	SIEMENS A52-A55-A57-A60-A62-A65-A70-A75-AL21-AX72-AX75-C55-C60-C62-C55-C2V1-C75-CF110-CF62-CF75-CF85-CL75-CT65-CV65-CX75-CX75i-CX75i-M55-M55i-MC50-M55-S65-SF65-SK65-SL55-SL75-SL75i-SL75i-XELIBRI1-XELIBRI2-XELIBRI3-XELIBRI4-XELIBRI5-XELIBRI7	OK	OK	NO	
(E) CNC000E000001	SAMSUNG	SAMSUNG SGH4800-SGHE100-SGHE400-SGHE700-SGHN500-SGHN600-SGHN620-SGHP100-SGHP400-SGHQ200-SGHS100-SGHS500-SGHT100-SGHT410-SGHT500-SGHV100-SGHV200-SGHX100-SGHX430-SGHX450-SGHX600	OK	NO	-	
(F) CNC0000000001	SAMSUNG	SAMSUNG SGHA100-SGHA110-SGHA300-SGHA400-SGHA500-SGHC100-SGHX120	OK	OK	OK	2
(N) CNC000A000004	SAMSUNG	SAMSUNG GALAXY I7500 - JET S8000 - OMNIA HD I8910 - OMNIA2 I8000 - SGH18510	OK	OK	NO	
(F) CNC0000000001	MOTOROLA	MOTOROLA A1000-A1200E-A6188-A780-A835-A925-C115-C118-C139-C140-C155-C200-C257-C281-C300-C330-C350-C385-C390-C550-C650-C975-E1000-E365-E378i-E380-E398-E690-ELITE-L7089-M3188-M3288-M3388-M3688-MPX200-MPX220-P7389-P7689-RCKRE1-STARTAC-ETACS-T180-T189-T190-T191-T192-T192M-T2288-T260-T260i-T260-T260i-T2700-T1MC336NEW-V100-V1050-V150-V171-V177-V180-V220-V235-V300-V360-V3688-V3690-V400P-V50-V51-V525-V535-V547-V550-V60-V60i-V620-V635-V66-V66i-V690-V70-V750-V80-V878-V975-V980-W175-W181-W205-W220-W230-W270-W375-W377-W397	OK	OK	OK	2
(F) CNC0000000001	NEC	NEC DB2000-DB4000-DB4100-DB500-E101-E122-MOOVA ETACS-MOOVA GSM-N342i-N910	OK	OK	OK	2
(F) CNC0000000001	OKI	OKI 1150E - 1325	OK	OK	OK	2
(F) CNC0000000001	PANASONIC	PANASONIC A100-A102-A200-A210-G50-G51-G60-G70-GD35-GD52-GD55-GD67-GD75-GD76-GD82-GD83-GD95-GD96-SC3-X100-X200-X300-X500	OK	OK	OK	2
(I) CNC0000000002	PANASONIC	PANASONIC GD87-P3411-P3421-X11-X400-X60-X70-X701-X77	OK	OK	NO	
(F) CNC0000000001	ALCATEL	ALCATEL OTS31 - OT835	OK	OK	OK	2
(F) CNC0000000001	DB TEL	DB TEL 6638	OK	OK	OK	2
(F) CNC0000000001	ENTEOS	ENTEOS IGO-610 - IGO 620	OK	OK	OK	2
(F) CNC0000000001	KN MOBILE	KN MOBILE KN200 - KN300	OK	OK	OK	2
(F) CNC0000000001	BLACKBERRY	BLACKBERRY 7100G-7230-7290-8700G-8800-PEARL 8100	OK	OK	OK	2
(F) CNC0000000001	HANDSPRING	HANDSPRING TREO 600i	OK	OK	OK	2
(F) CNC0000000001	I-MATE	I-MATE PDA2K	OK	OK	OK	2
(F) CNC0000000001	HAIR	HAIR V100	OK	OK	OK	2
(F) CNC0000000001	LG	LG A7150-B2050-C1100-C2200-C3100-C3300-C3380-F2300-F2400-G210-G220-G2300-G5400-G5410-G5500-G7030-G7050-G7100-G7110-G8000-KG120-KG225-KP202i-KP2931-L1100-L3100-L341i-L342i-S5100-S5200-T5100-U8110-U8120-U8130-U8138-U8150 -U8180-U8330-W3000-W5200-W7000-W7020	OK	OK	OK	2
(F) CNC0000000001	mitsubishi	MITSUBISHI M341i-M342i-M430i-M720-MT30-MT430-MTD30	OK	OK	OK	2
(F) CNC0000000001	ONDA	ONDA N2020 - N2030	OK	OK	OK	2
(F) CNC0000000001	PALM ONE	PALM ONE TREO 650	OK	OK	OK	2
(F) CNC0000000001	PANTECH	PANTECH GF200	OK	OK	OK	2
(F) CNC0000000001	PHILIPS	PHILIPS 162-350-355-530-535-568-639-650-755-855-859-XENIUM9@98	OK	OK	OK	2
(F) CNC0000000001	QTEK	QTEK 9090	OK	OK	OK	2
(F) CNC0000000001	SENDO	SENDO M550 - P200 - P220- P600 - S200 - S230 - S300 - S330 - S600 - X	OK	OK	OK	2
(F) CNC0000000001	SHARP	SHARP GX20 - GX10 - GX10i - GX15 - GX17 - GX25 - GX29	OK	OK	OK	2
(I) CNC0000000002	SHARP	SHARP GX30	OK	OK	NO	
(F) CNC0000000001	TELIT	TELIT ES530-G80-G82-G83-GM822-GM824-GM832-GM882-T130-T90-T91	OK	OK	OK	2
(F) CNC0000000001	XPLORE	XPLORE G18 - G88	OK	OK	OK	2
(F) CNC0000000001	TRIUM	TRIUM ARIA - ASTRAL - GALAXY - GEO	OK	OK	OK	2
(F) CNC0000000001	ZTE	ZTE F866	OK	OK	OK	2
(I) CNC0000000002	NEC	NEC DB7000-E228-E313-E323-E525-E606-E616-E616V-E808-E808Y-N223i-N341i	OK	OK	NO	
(L) CNC0000000003	ERICSSON	ERICSSON A2618S-A2628S-R310S-R320S-R380S-R520M-R600-T20S-T28S-T39M-T65-T66-T68	OK	OK	OK	
(L) CNC0000000003	SONY ERICSSON	SONY - ERICSSON F500i-J200i-J210i-J300i-K300i-K500i-K600i-K608i-K700i-P800-P900-P910-S700i-T100-T105-T200-T230-T290i-T300-T310-T600-T610-T830-T88i-V600i-V800-Z1010-Z200-Z300i-Z600-Z800i	OK	OK	OK	
(M) CNC0000000001	SONY ERICSSON	SONY ERICSSON C922-D750i-J1000-J230i-K530i-K550i-K550iM-K610i-K610iM-K660i-K750i-K800i-M650i-P1-P990i-S500i-V630i-V640i-W300i-W350i-W650i-W650iM-W760i-W760iM-W800i-W810i-W850i-W880i-W900i-W950i-W980-Z310i-Z320i-Z520i-Z530i-Z550i-Z610i	OK	OK	OK	
(F) CNC0000000001	VODAFONE	VODAFONE 710-PRIMOFONINO D100 -PRIMOFONINO D101	OK	OK	OK	2
(N) CNC000A000004	VODAFONE	VODAFONE 715	OK	OK	NO	

(*) It is specified that some of the functions of the various N-COM versions may not be available even with the telephones shown in the list due to the continuous developments in the software installed on the telephones themselves

NOTES
IN CASE OF A WEAK NETWORK SIGNAL, SOME INTERFERENCE MAY OCCUR WHICH IS NOT CAUSED BY THE N-COM SYSTEM OR THE WIRE CONNECTION

NOTES
1 Using intercom wires with certain types of mobile phone can create an electronic noise inside the "slave" or second helmet only

2 Some mobile phones prevent the call tone from being heard inside the helmet, in this case it is recommended to set the mobile to vibrate and/or automatic answer. Old models can create an echo within the system of the intercom and also inside the helmet. Certain models of mobile phones will recall the previous dialed number upon pushing the "call" button, to activate this call press the button again. The hanging up after a call for some mobile models corresponds, on the N-Com E-box, to the function "switching the intercom back on", which can be done pressing the * (volume up) key for several seconds